



Programming The Remote Control

Find the 4-digit number for your Television on Page 2.

Step 1: Press and Hold the **1** and **3** buttons at the same time for around 3 seconds until the **TV Standby** button stays lit. Release the buttons.

Step 2: Enter the 4-digit number of your Television on the keypad. The **Television Standby** button will flash at each entry and will stay lit after entering the code. If it does not, start from the beginning.

Step 3: Point the remote at your Television and press and hold the **Mute or TV Standby** button until the Mute symbol appears on your screen or Television turns off – this may take a few minutes. Release the button **Mute or Standby button**

If the remote does not find a code that works, the **Television Standby** button will flash rapidly and go out.

Step 4: To 'lock in' the remote to your Television, press and hold the **Text/Shift** Button and then press the **Stop Button** and release both. The Television Standby button will go out. Test your remote.

The following buttons should now operate the TV: **TV Standby, AV Source Select, Volume Up, Volume Down, Mute**

If not all the above key work, a KEY FIX method can be performed (see Page 3)

Emerson – 0917
GE - 1081
Goldstar – 1140
Hitachi – 1251
Hello Kitty - 1221
Insignia – 1368
JVC – 1460
Kenwood - 1507
LG – 1628
Magnavox – 1706
Memorex – 1800
Mitsubishi – 1855
NEC – 1950
Panasonic – 2153
Philips – 2195
Pioneer – 2212
RCA – 2351
Samsung – 2448
Sharp – 2550
Sony – 2679
Toshiba – 3021
Vizio – 3211
Westinghouse – 3249

If you don't see your television model on this page, refer to our website for the full code list.

TV Shift Function

When a TV brand has been programmed, the following additional buttons may also control the TV. These can be accessed by pressing and holding the **TEXT/SHIFT** button on the remote and at the same time pressing:

Digit Buttons 0..9, Left, Right, Up, Down, OK, Channel Up, Channel Down, the 4 color keys

Operation of these buttons is not guaranteed to control the TV set.

Key Fix

If not all the previously mentioned buttons operate the TV set then a **Key Fix** operation can be performed as follows:

1. Press and hold the **1** and **9** buttons at the same time for about 3 seconds until the **TV Standby** button is lit.
2. Try the TV buttons mentioned above.
3. If the TV doesn't respond to a button, then press and hold that button and the remote will test different codes until and if the TV responds. Release the button if the TV responds to the new code.
4. Repeat for other buttons if necessary.
5. Once finished, press and hold the **Text/Shift** Button and then press the **Stop Button** and release both.

Resetting The Remote Control

To reset the remote control to factory settings, do the following:

1. Press and hold the **1** and **6** buttons at the same time for about 3 seconds until the **TV Standby** button is lit.
2. Enter the following key sequence on the number pad: **9 9 6**
3. The TV settings will be deleted from the remote.