

## Device Control



1. TV Standby Button
2. TV Input Select
3. STB Standby Button

## Browsing Control



1. Weather
2. Caller ID
3. Apps/Guide Search
4. Favorites
5. DVR Menu
6. Open STB Options
7. Program Information
8. Navigation Keys
9. Select Highlighted Items
10. Return to prev menu/Previous Channel
11. Display Interactive Guide
12. Exit all menus and return to TV



## DVR Control



1. Rewind recording or Live TV
2. Plays your program
3. Pauses your program
4. Fast forwards your program
5. Records current program
6. Displays recorded programs and schedules

## Channel Control



1. Increases or decreases volume
2. Scrolls through menus
3. Changes channels
4. Turns all sound on or off
5. Returns to previous channels

## Keypad Control



1. Numeric Keys and Letters for manual input
2. Teletext (Press and release) TV Shift (press and hold)
3. Subtitles Button